

## Embra Lounge Leg Frame Attachments

### Embra In-Line and End Leg Frame Assembly

#### Tools Required

- Drill Driver with #2 Phillips bit. 4 to 6" extension recommended.

#### Hardware Required


- End or In-line Leg Frame
- Truss Head Phillips drive #1/4-20 X 1/2" screws

#### Installation:


- Unbox the lounge unit.
- Turn over onto a clean surface free of debris.
- Locate the end and/or in-line leg frame box and hardware bag containing screws.

#### To Install the End or In-line Leg Frame:

1. Note which Embra model and leg frame(s) are in the box. The configuration will dictate where each leg is positioned. Reference images on right to identify the legs received per box.
2. Slide the mounting extrusion into the metal rails as shown; see Figure A & B.
3. Install four (4) Truss Head Phillips drive #1/4-20 X 1/2" screws; see Figure A & B.
4. End leg frames are for non-ganging models, or at the end of a set of Modular models.
5. In-line leg frames are for Modular models only, and used for ganging purposes.

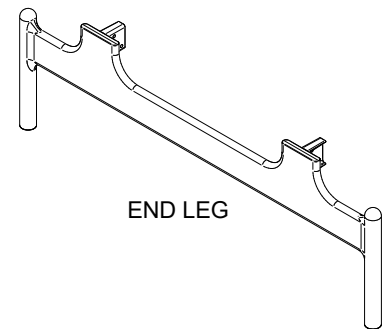

END LEG

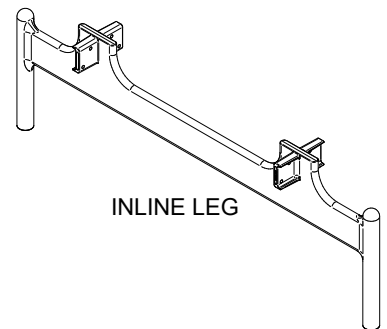

INLINE LEG

Figure A


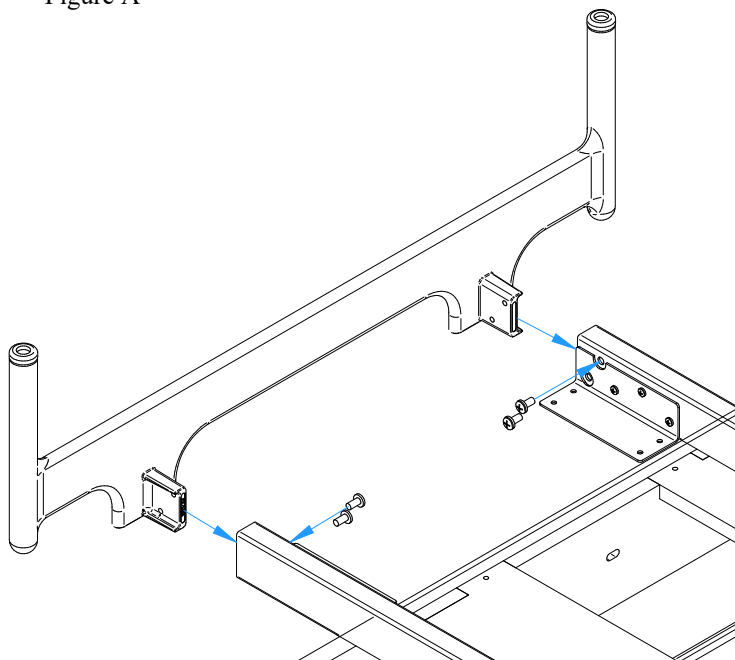


Figure B

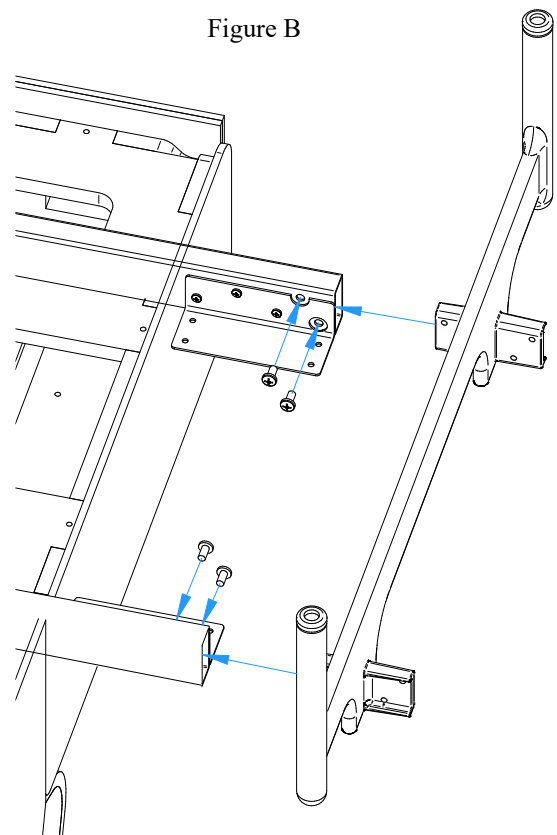

---

## Embra Corner Leg Assembly to Upholstered Corner Unit

### Tools Required

- Drill Driver with #2 Phillips bit with 4 to 6 inch extension.

### Hardware Required

- Corner Leg
- Button Head Phillips drive #1/4-20 X 3/4" screws

### Installation:

- Unbox the corner lounge unit.
- Turn over onto a clean surface free of debris.
- Locate the corner leg and hardware bag containing screws.

### To Install the Leg to Upholstered Corner Unit:

1. Locate the four (4) holes with T-nuts located at the corner of the lounge.
2. Align the Corner Leg with the T-nuts inside the holes.
3. Install four (4) Truss Head Phillips drive #1/4-20 X 3/4" screws; see Figure A.

