

Embra End Caps Installation

Upholstered End Cap

Tools Required

- #2 Phillips drive bit with drill

Hardware Required

- Pan Head Phillips Wood Screw #8 X 1.0"

Installation:

- Unbox the Lounge unit and place on a clean surface free of debris.
- Locate hardware packet
- Position the Lounge unit and attachment unit onto their backs.
- When assembling the upholstered End Cap, locate the "Front End" label on the underside of the End Cap. That end must align with the front of the upholstered lounge to ensure no fabric flip occurs.

Install the End Cap to Lounge:

1. Use Assembly Instructions 3365646 Embra Lounge Leg Attachment to assemble legs to Lounge model.
2. Place Upholstered End Cap over the end cap connection the configuration calls for.
3. Align front of upholstered End Cap to the front surface of the upholstered seat assembly. Place tight to the Lounge unit with no visual gaps. See Figure C
4. Drive one #8 x 1.0" screw per bracket to hold in place.
5. Use four (4) #8 X 1.0" to attach each bracket. See Figure E

Figure E

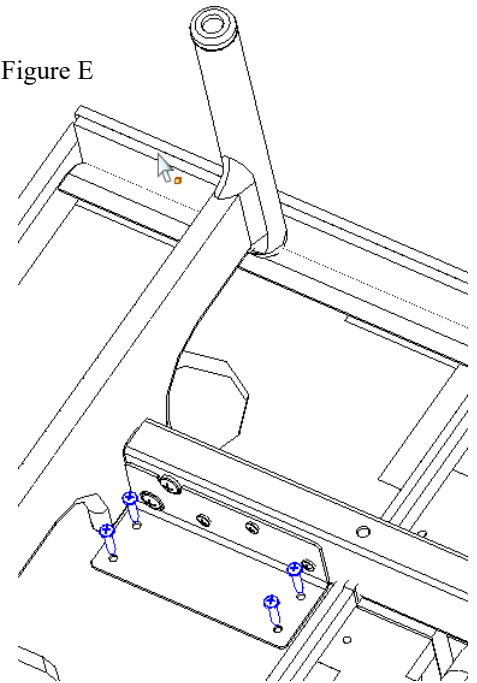


Figure C


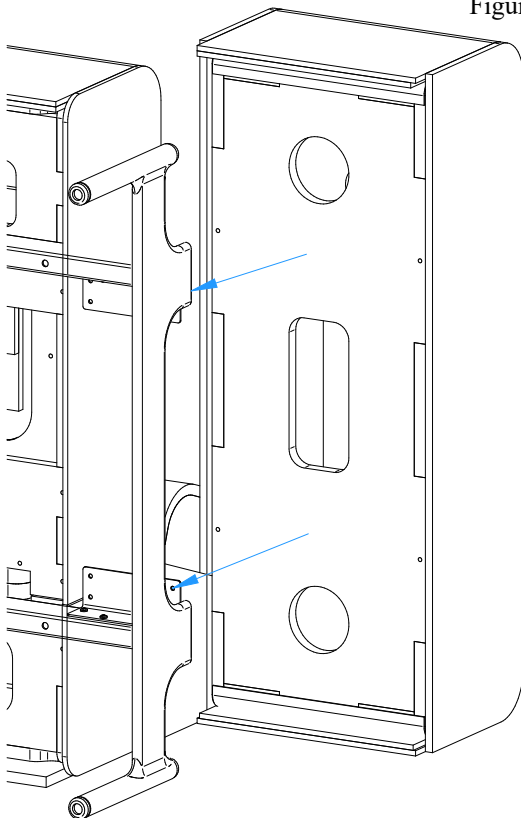


Figure D

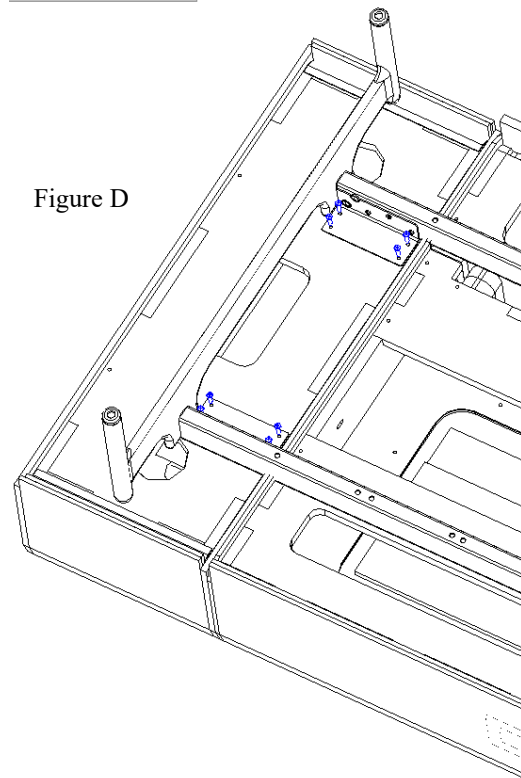

Laminate Panel End Caps

Tools Required

- Drill driver with #2 bit

Hardware Required

- Pan Head Phillips #8 X 3/4"

Installation:

- Unbox the lounge unit and place on a clean surface free of debris.
- Locate hardware packet
- Position the lounge unit and attachment unit onto their backs.

Install the End Cap to Lounge:

1. Use Assembly Instructions 3365646 Embra Lounge Leg Attachment to assemble legs to Lounge model.
2. Locate the alignment hole on the bottom side of the End Cap unit. See Figure C
3. Align the bracket from the rail to the alignment hole. See Figure C
4. Use four (4) #8 X 3/4" to attach End Cap to each bracket. See Figure D & E

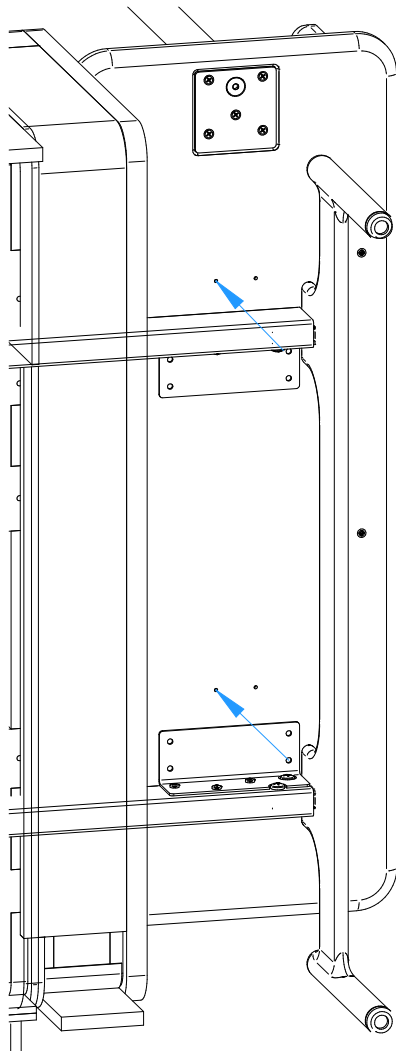


Figure C

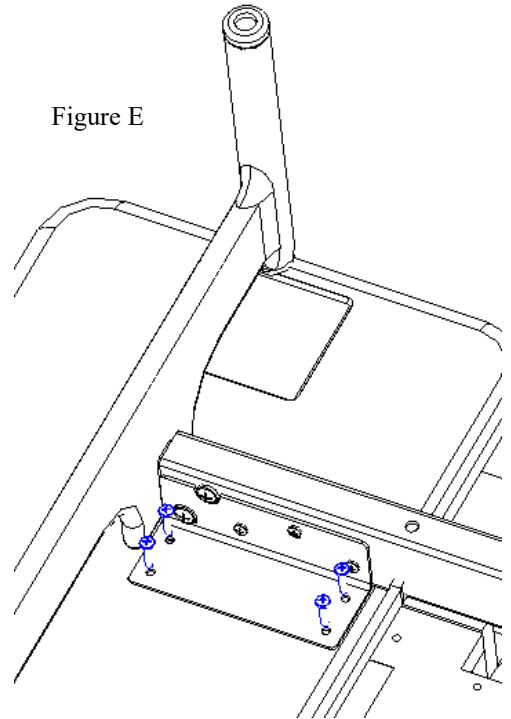


Figure E

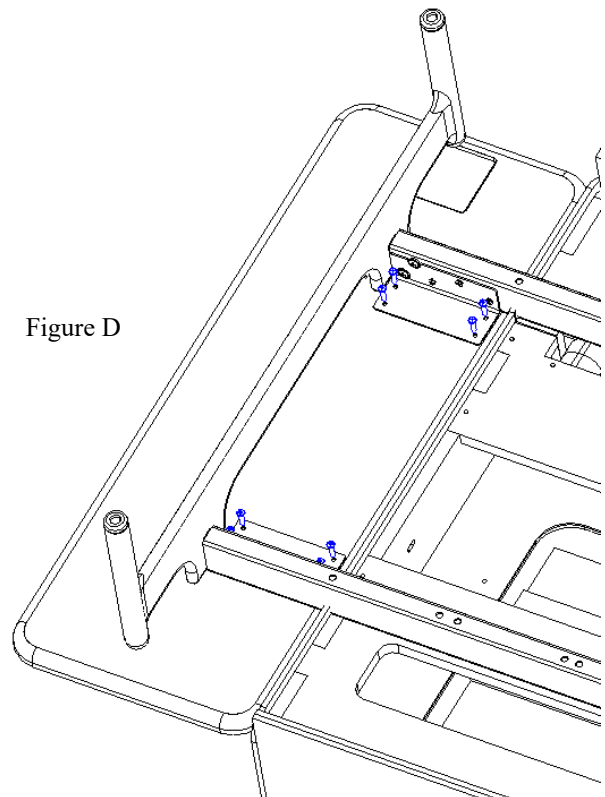


Figure D

Installation Continued

Tools Required

- Drill driver with #2 bit

Hardware Required

- Pan Head Phillips Wood Screw #8 X 3/4" - Laminate Panel End Cap
- Pan Head Phillips Wood Screw #8 X 1.0" - Upholstered End Cap

Installation:

- Unbox the lounge unit and place on a clean surface free of debris.
- Locate hardware packet
- Position the lounge units and End Cap onto their backs.

Installing End Caps between Embra Modular Lounge:

1. Use Assembly Instruction 3365642 Embra Modular Lounge Assembly to gang together lounge units.
2. Locate the alignment hole on the attachment unit.
3. Align the bracket from the rail to the alignment hole. See Figure H
4. Use two (2) #8 X 3/4" to attach each bracket. See Figure I and J

